

i21 Media Cabinet



Lightspeed Sound System

The Lightspeed Sound system is the light gray “box” in the media cabinet (Note: If Media Cabinet is not present in classroom, the Lightspeed system may be installed in an existing cabinet in the classroom).



When powered on, the red light indicator lights up. If you do not see the red light illuminated, make sure the top part of the button is down as shown.



If the red light indicator is not lit, check the power strip mounted inside of the lower back part of the media cabinet.

The power strip should have a red light indicator showing that it is powered on. The Lightspeed Sound System’s power cable should be plugged into the power strip.

If there are any disconnected or loose power cables, plug them in.



The power strip cable goes through a cutout on either side of the media cabinet. Follow the cable to make sure it is plugged into an electrical outlet.

Once the Lightspeed Sound System is powered on, you can adjust the volume if it is too loud or too low. Use the black knobs that have a blue strip, indicating the current volume setting.



Volume A and Volume B are for the two Redmike microphones. The volume settings are typically set to about 11 o’clock for most classrooms as indicated in the picture. The Redmike microphones are labeled on the back.

There are three additional volume control knobs: Computer, TV/VCR and CD/DVD.

If adjusting the volume settings, it is best to start with the lowest setting and work your way up to a comfortable level. If the volume is too high, you may experience feedback.

i21 Media Cabinet

Redmike Microphones

The Redmike Microphones in their cradle can be placed on any flat surface in the i21 media cabinet. The cradle must have power and be in an upright position. This is to ensure the microphones stay in good working condition and are always charged.

They sit in a black cradle marked “Lightspeed”. When they are not in use, it’s best to leave them cradled.

The cradle has two indicator lights. If a microphone is fully charged the indicator light will be green. If a microphone is not fully charged the indicator light will be red. If the indicator lights are black, this means the cradle is not plugged in.

Check the power strip mounted inside of the lower back part of the media cabinet. Follow the cradle’s power cable and make sure it is plugged into the power strip and also into the back of the cradle.



If everything is plugged in and there is a flashing red light, this means that the batteries are dead or missing. The district I.T. department does not supply batteries. They must be purchased by the school site. If your site needs to purchase batteries, please check the district products price list at www.sandi.net/pricelist.

Each Redmike Microphone has a power button on the side. When powered on for use in the classroom, it will show an indicator light that is blue. If you do not see the blue light, the microphone is not powered on.

On = **BLUE**

The Redmike Microphones come with one lanyard. The lanyard is for hands free use and is typically attached to the microphone in use by the teacher. It is removable and can be attached to either microphone.

i21 Media Cabinet

DVD/VCR



The DVD/VCR will be located in the media cabinet installed in the classroom with i21 (Note: if your classroom does not have a media cabinet, this device may be installed in existing cabinets in the classroom).

The DVD/VCR can be powered on with the power button in the left front corner of the machine. If the player does not power on when the button is pushed, check the power strip mounted inside of the lower back part of the media cabinet.

The power strip should have a red light indicator showing that it is powered on. The DVD/VCR power cable should be plugged into the power strip.

If there are any disconnected or loose power cables, plug them in.

The power strip cable goes through a cutout on either side of the media cabinet. Follow the cable to make sure it is plugged into an electrical outlet.

